

This document provides additional assistance with wiring your Extron IP Link enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific Extron IP Link enabled product or the controlled device manufacturer supplied documentation.

---

***Device Specifications:***

Device Type: Display  
Manufacturer: Mitsubishi  
Firmware Version: N/A  
Model(s): LDT551V

***Version History:***

Driver Version	Date	IP Link Compiler	GC Version	Notes
2	12/28/2012	1.5.1	3.3.2	Added Volume Discrete and updated driver to latest standards.
1	9/6/2011	1.4.0	3.2.0	Initial version.

***Driver Notes:***

- The driver has been optimized for Volume.

# IP Link® Device Interface Communication Sheet

## Control Commands & States:

<b>Auto Image</b>	Execute		
<b>Input</b>	RGB 1	RGB 2	RGB 3
	RGB 4	Optional	RGB 6
	Video	DVD / HD	S-Video
<b>Mute</b>	Execute		
<b>Power Control</b>	On	Off	
<b>Volume (Discrete)</b>	0 to 100 in steps of 1		
<b>Volume (Step)</b>	Up	Down	

## Status Available:

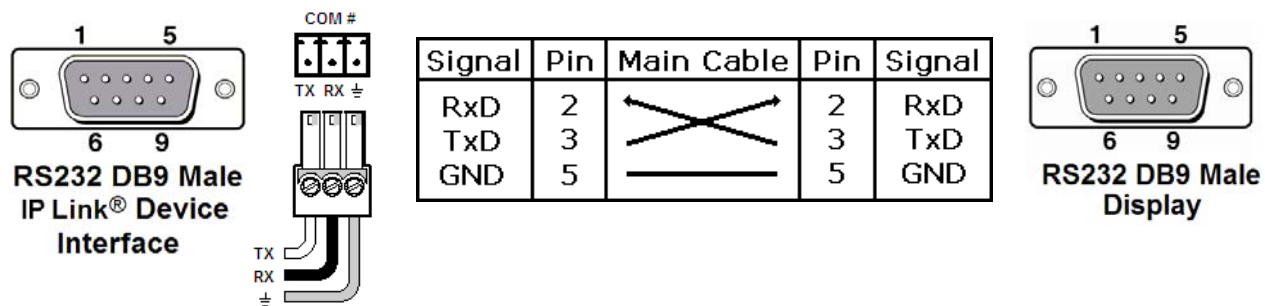
<b>Connection Status</b>	Connected	Disconnected	
<b>Input</b>	RGB 1	RGB 2	RGB 3
	RGB 4	Optional	RGB 6
	Video	DVD / HD	S-Video
<b>Power Control</b>	On	Off	
<b>Power Status</b>	On	Off	Status Unavailable
<b>Volume (Discrete)</b>	0 to 100 in steps of 1		

## MLC60 Series Supported Commands:

<b>Auto Image</b>	Execute		
<b>Input</b>	RGB 1	RGB 2	RGB 3
	RGB 4	Optional	RGB 6
	Video	DVD / HD	S-Video
<b>Mute</b>	Execute		
<b>Power Control</b>	On	Off	
<b>Volume (Discrete)</b>	0 to 100 in steps of 1		
<b>Volume (Step)</b>	Up	Down	

**Cable and Adapter Requirements:**

F/F RS232 Null Modem Serial Cable

**Notes for the Device:****Serial communication:****Port Type:** RS-232**Baud Rate:** 9600**Data Bits:** 8**Parity:** None**Stop Bits:** 1**Flow Control:** None**Pin Assignments Diagram:**

Note: Captive screw connector may also be used as a serial connection.

**General Notes:**